


Conditions of Use


- 1.Cold water supply * heating water pressure
minimum pressure 0.05MPa (flow pressure)
maximum pressure 1.0MPa(maximum pressure)
It is recommended to use pressure 0.1-0.5MPa(flow pressure)
over 0.5MPa to install a pressure reducing valve to detect pressure 1.6MPa (static pressure)
- 2.The water supply temperature is 4 C 90 C, hot water temperature 60 C is recommended, and steam is not used for heating water.
- 3.Use ambient temperature above 0°C.If it is lower than 0 °, the nozzle will be deformed, frozen and cracked.
- 4.When not in use for a long time, it may lead to internal and external rust of the nozzle and cannot be used.
- 5.If you need to discard this product, please do not treat it as general domestic waste.Please carry out appropriate treatment, recovery and recycling through an independent recycling system in accordance with regulations.

Accessories list (small shower faucet)

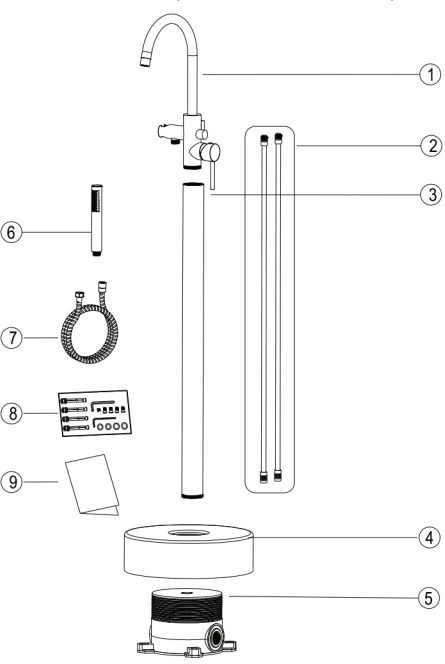


Number	Name	Quantity
1	Shower tube set	1
2	Water guide pipe	2
3	Connecting column	2
4	Decorative cover	1
5	Embedded body	1
6	Hand shower	1
7	Shower hose	1
8	Screw bag	1
9	Instructions	1


4

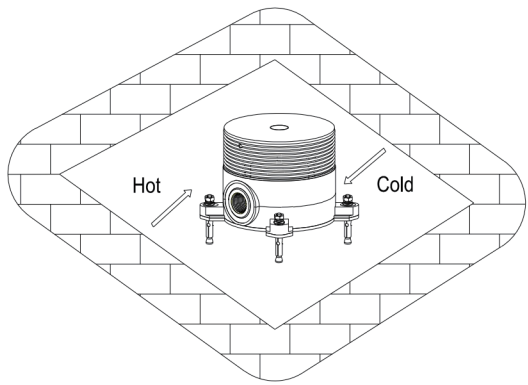


5

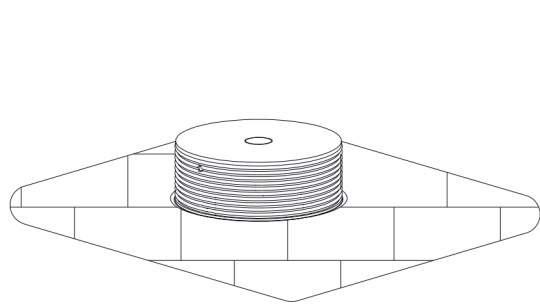


6

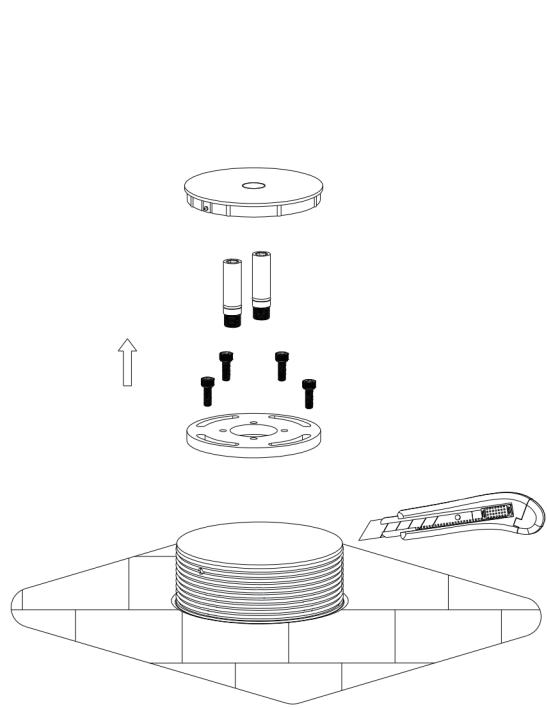


7

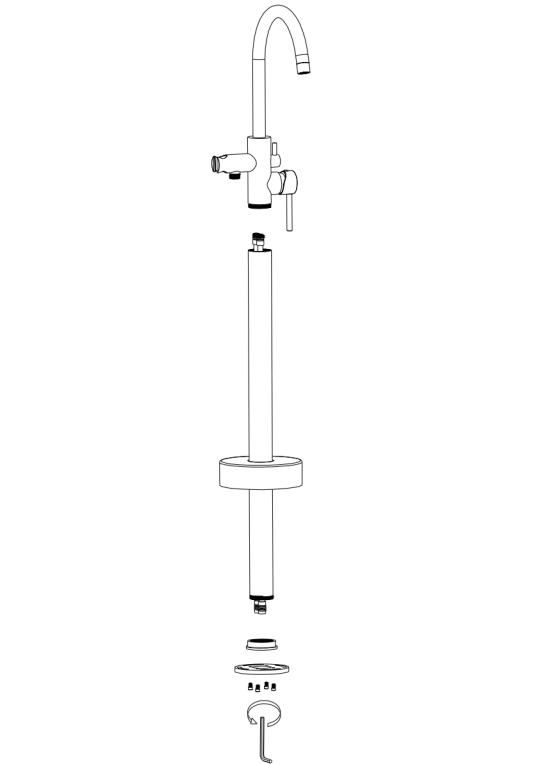


Product size drawing

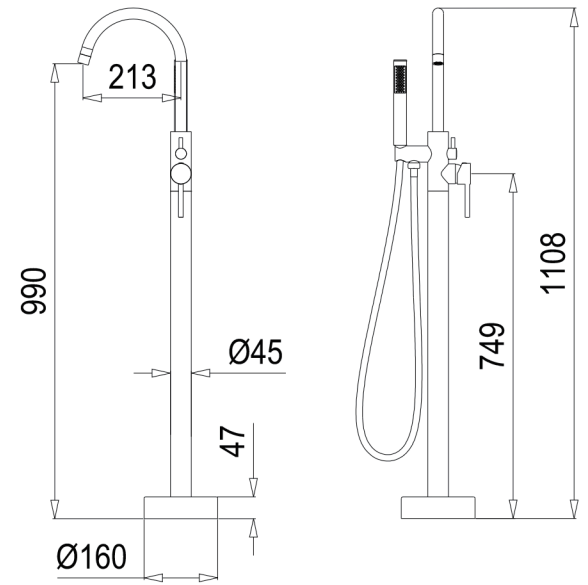


1

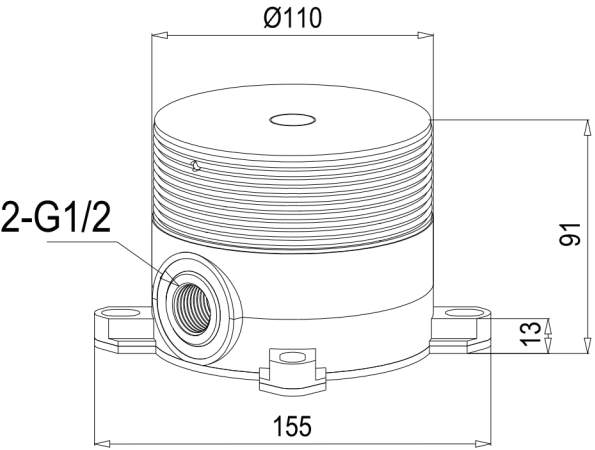


2

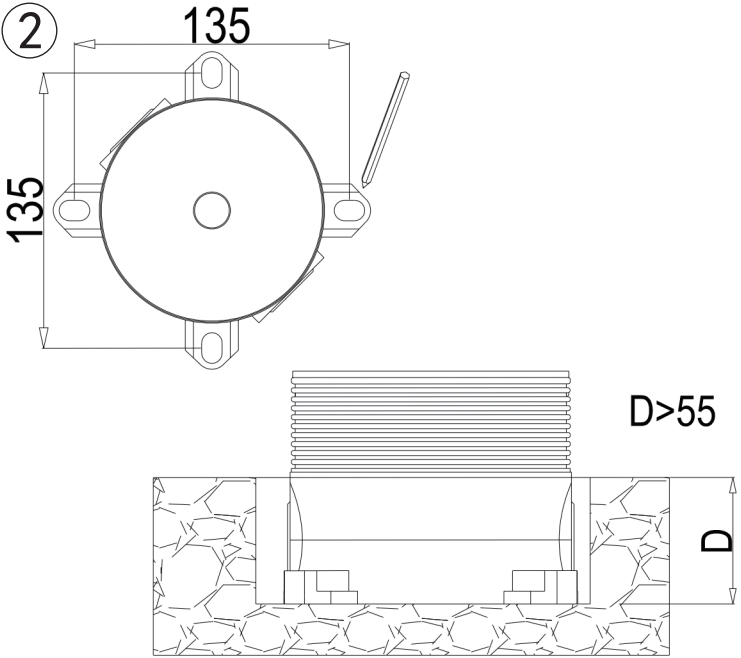


3

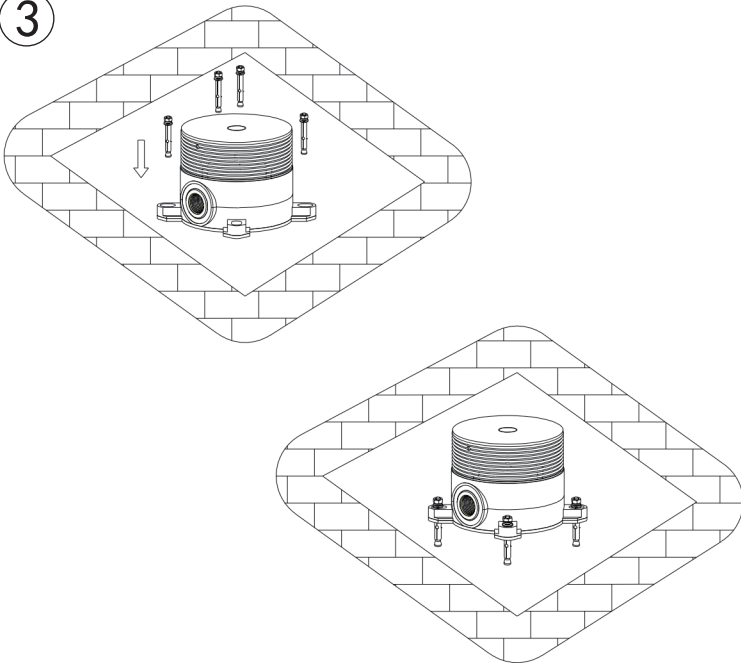

8

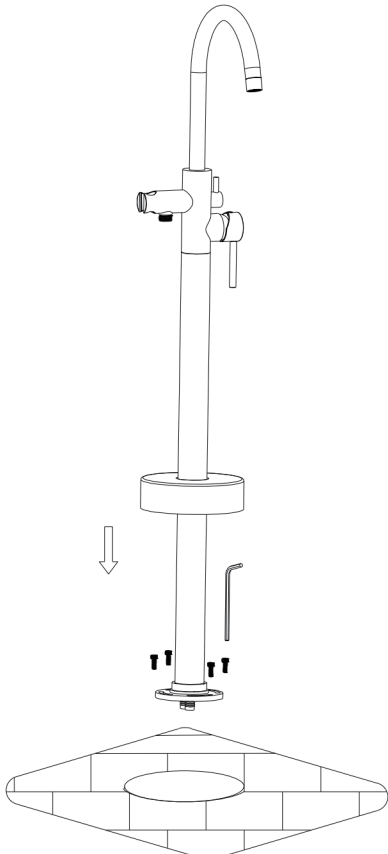

9

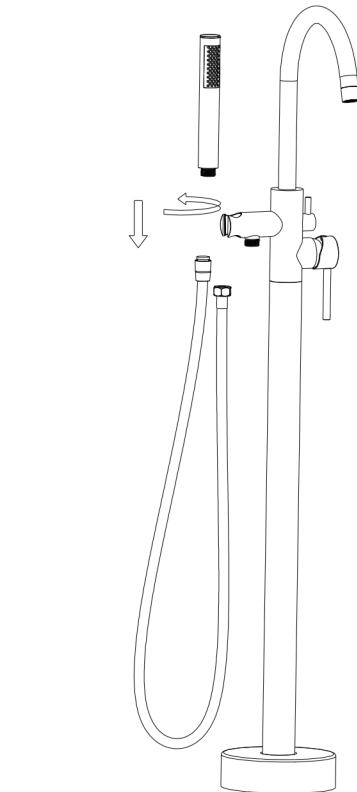

10

